



# Boulevard Banner Bracket System

## Installation Instructions

Each Boulevard Bracket System Includes the following:

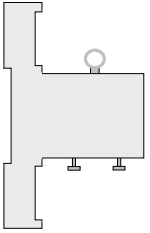

Two cast aluminum brackets with two tightening screws and one eyelet each to secure banner with supplied zip ties.



Two fiberglass arms, 1.25” in diameter, reinforced with aluminum sleeves  
Plus four steel bands and two zip ties

## Installation

### Step 1: Determine installation height.

The distance between the lower edge of the upper cast aluminum bracket and the upper edge of the lower aluminum bracket should be equal to banner height minus 4”

### Step 2: Install upper banner arm

Step 2.1: Install upper bracket using supplied steel bands.

Step 2.2: Install upper banner arm by sliding aluminum reinforced section into bracket

Step 2.3: Tighten screws on bracket to make sure the banner arm is secured. It is strongly recommended to use some adhesive on the screws such as Loctite to ensure that screws will not become un-tightened over time.

### Step 3: Install banner

Step 3.1: Slide banner pocket over top banner arm.

Step 3.2: Secure banner on banner arm by running zip tie through the upper banner grommet and the eyelet on the bracket. Tie the zip tie and cut off unused section.

Step 3.3: Insert lower banner arm into banner’s bottom pocket

### Step 4: Install lower banner arm

Step 4.1: Install lower bracket using supplied steel bands at proper height as per Step 1.

Step 4.2: Install lower banner arm by sliding reinforced aluminum section into bracket

Step 4.3: Tighten screws on bracket to make sure the banner arm is secured. It is strongly recommended to use some adhesive on the screws such as loctite as to ensure that screws will not become un-tightened over time.